


NO. 0828 Pile fleece jacket



Description (measured in cm)	S	M	L	XL	2XL	3XL
A: ½ Chest width	50	53	57	61	65	68
E: Front length from high point shoulder	68	70	72	74	76	78
H: Shoulder to shoulder	43.5	45	47	49	51	52.5
K: Sleeve length - long	70.5	71	71.5	72.25	73	74
L: ½ upper arm width	19.5	20.5	21.5	22.5	23.5	24.5

How to measure

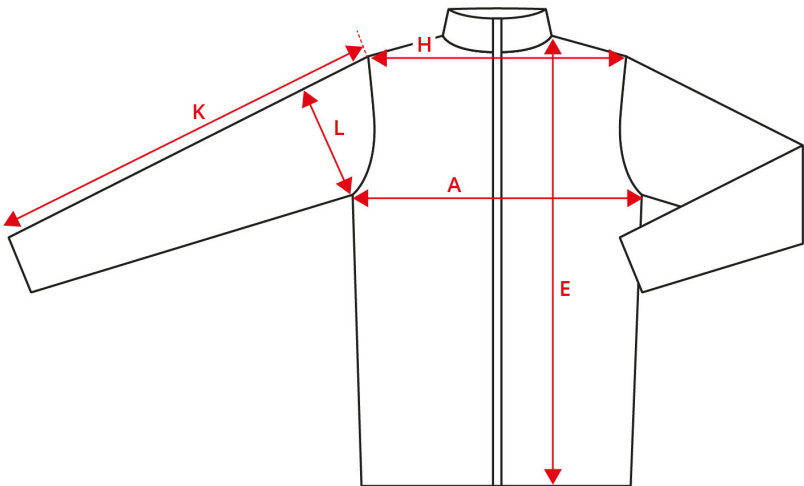

Tolerance in cm

A	E	H	K	L
1.5	1.5	1.5	1.5	1

The measurements in a product measurement chart refer to measurements made directly on the clothing. Lay the garment out flat on an even surface without stretching it. Take the measurements as shown by the arrows and select the size that fits. Use a tape measure for the best results. The tolerances in the measurement chart are based on when the item is received from ID® and not after washing. We reserve the right to make mistakes and omissions in the chart. You are always welcome to contact us for further guidance on using our product measurement chart at support@id.dk or tel: +45 97492144